

OWNER'S MANUAL 193111-080

Issued March 7, 2008

IMPORTANT: Read these instructions before installing, operating, or servicing this system.

BATTERY-MATE 80

**Silicon Diode
Ferroresonant Transformer type
Battery Charger**

DO NOT DESTROY

Note: This manual also applies to Battery-Mate units that were shipped prior to January 1, 2005.

AMETEK/PRESTOLITE POWER , TROY, OHIO 45373-1099, U.S.A.

INTRODUCTION	1
How to use this Manual	1-1
Equipment Identification	1-1
Receipt of Equipment	1-1
SAFETY INSTRUCTIONS AND WARNINGS	2
DESCRIPTION OF EQUIPMENT	3
Charger	3-1
Charge Control	3-1
INSTALLATION	4
Location	4-1
Grounding	4-1
Line Voltage Changeover Instructions	4-1
Line Connections to Battery Charger	4-2
Charging Cable Connectors	4-3
Pre-operation Checks	4-3
OPERATION	5
Preliminary	5-1
Normal or Daily Charge	5-1
Equalize or Weekend Charge	5-1
Manual Stop	5-2
Battery Discrimination	5-2
Refresh Charge	5-2
Backup Timer Shutdown	5-2
Battery Disconnect Shutdown	5-3
Low Current Shutdown	5-3
AC Power Fail	5-3
MAINTENANCE	6
Inspection and Cleaning	6-1
Lubrication	6-1
Charging Rate Adjustment	6-1
Fuse Replacement	6-2
Silicon Diode Testing	6-2
Capacitor Testing	6-3
TROUBLESHOOTING	7
PARTS LIST	8
DIAGRAMS	
WARRANTY	

INTRODUCTION

How To Use This Manual

IMPORTANT: It is especially important that all charger internal components be kept clean and dry, and all electrical connections as tightened as instructed in the Maintenance chapter of this manual. Replace any precautionary or instruction label that cannot be easily read.

To ensure safe operation, read the entire manual, including the chapter on Safety Instructions and Warnings.

Throughout this manual, the words **WARNING**, **CAUTION**, and **NOTE** may appear. Pay particular attention to the information provided under these headings. These special annotations are easily recognized as follows:

WARNING gives information regarding possible personal injury. Warnings will be enclosed in a box such as this.

CAUTION refers to possible equipment damage. Cautions will be shown in bold type.

NOTE offers helpful information concerning certain operating procedures. Notes will be shown in italics.

Equipment Identification

The unit's identification number (specification, model, serial number) usually appears on a nameplate attached to the front panel.

Receipt Of Equipment

When you receive the equipment, check it against the invoice to make sure it is complete and inspect the equipment for possible damage due to shipping. If there is any damage, notify the carrier immediately to file a claim. Furnish complete information concerning damage claims or shipping errors to the company shown on the cover of this manual. Include all equipment identification numbers and group part numbers (if any) as described above along with a full description of the parts in error.

Additional copies of this manual may be purchased by contacting the company shown on the cover of this manual. Include the Owner's Manual number and equipment identification numbers.

SAFETY INSTRUCTIONS AND WARNINGS

FOR OPERATION OF BATTERY CHARGING EQUIPMENT

IMPORTANT – READ AND UNDERSTAND THESE INSTRUCTIONS. DO NOT LOSE THEM. ALSO READ OPERATING/INSTRUCTION MANUAL BEFORE INSTALLING, OPERATING, OR SERVICING THIS EQUIPMENT.

A. General

Battery charging products can cause serious injury or death, or damage to other equipment or property, if the operator does not strictly observe all safety rules and take precautionary actions.

Safe practices have developed from past experience in the use of charging equipment. These practices must be learned through study and training before using this equipment. Anyone not having extensive training in battery charging practices should be taught by experienced operators.

Only qualified personnel should install, use, or service this equipment.

B. Shock Prevention

Bare conductors, or terminals in the output circuit, or ungrounded, electrically-live equipment can fatally shock a person. To protect against shock, have competent electrician verify that the equipment is adequately grounded and learn what terminals and parts are electrically HOT.

The body's electrical resistance is decreased when wet, permitting dangerous current to flow through the body. Do not work in damp area without being extremely careful. Stand on dry rubber mat or dry wood and use insulating gloves when dampness or sweat cannot be avoided. Keep clothing dry.

1. Installation and Grounding of Electrically Powered Equipment – Electrical equipment must be installed and maintained in accordance with the National Electrical Code, NFPA 70, and local codes. A power disconnect switch must be located at the equipment. Check nameplate for voltage and phase requirements.

If a grounding lead (conductor) is part of the power supply cable, be sure to connect it to a properly grounded switch box or building ground. If not part of the supply cable, use a separate grounding lead (conductor). Do not remove a ground prong from any plug. Use correct mating receptacles. Check ground for electrical continuity before using equipment.

The grounding conductor must be of a size equal to or larger than the size recommended by Code or in this manual.

2. Charging Leads – Inspect leads often for damage to the insulation. Replace or repair cracked or worn leads immediately. Use leads having sufficient capacity to carry the operating current without overheating.
3. Battery Terminals – Do not touch battery terminals while equipment is operating.
4. Service and Maintenance – Shut OFF all power at the disconnect switch or line breaker *before* inspecting, adjusting, or servicing the equipment. Lock switch OPEN (or remove line fuses) so that the power cannot be turned ON accidentally. Disconnect power to equipment if it is to be left unattended or out of service.

Disconnect battery from charger. Measure voltage on capacitors and discharge through an insulated screwdriver if there is any voltage reading.

Keep inside parts clean and dry. Dirt and/or moisture can cause insulation failure. This failure can result in high voltage at the charger output.

C. Burn and Bodily Injury Prevention

The battery produces very high currents when short circuited, and will burn the skin severely if in contact with any metal conductor that is carrying this current. Do not permit rings on fingers to come in contact with battery terminals or the cell connectors on top of the battery.

Battery acid is very corrosive. Always wear correct eye and body protection when near batteries.

D. Fire and Explosion Prevention

Batteries give off explosive flammable gases which easily ignite when coming in contact with an open flame or spark. Do not smoke, cause sparking, or use open flame near batteries. Charge batteries only in locations which are clean, dry, and well ventilated. Do not lay tools or anything that is metallic on top of any battery. All repairs to a battery must be made only by experienced and qualified personnel.

E. Arcing and Burning of Connector

To prevent arcing and burning of the connector contacts, be sure the charger is OFF before connecting or disconnecting the battery. (If the charger is equipped with an ammeter, the ammeter should not indicate current flow.) Always connect battery before turning charger ON.

F. Medical and First Aid Treatment

First aid facilities and a qualified first aid person should be available for each shift for immediate treatment of electrical shock victims.

EMERGENCY FIRST AID: Call physician and ambulance immediately. Use First Aid techniques recommended by the American Red Cross.

DANGER: ELECTRICAL SHOCK CAN BE FATAL. If person is unconscious and electric shock is suspected, do not touch person if he or she is in contact with charging leads, charging equipment, or other live electrical parts. Disconnect (open) power at wall switch and then use First Aid. Dry wood, wooden broom, and other insulating material can be used to move cables, if necessary, away from person. IF BREATHING IS DIFFICULT, give oxygen. IF NOT BREATHING, BEGIN ARTIFICIAL BREATHING, such as mouth-to-mouth. IF PULSE IS ABSENT, BEGIN ARTIFICIAL CIRCULATION, such as external heart massage.

IN CASE OF ACID IN THE EYES, flush very well with clean water and obtain professional medical attention immediately.

G. Equipment Warning Labels

Inspect all precautionary labels on the equipment. Order and replace all labels that cannot be easily read.

DESCRIPTION OF EQUIPMENT

Charger

The basic charging circuit is the silicon diode, rectifier-type with ferroresonant transformer (s). This ferroresonant transformer design regulates charging current by allowing the battery to determine its own charge cycle rate in accordance with its state of discharge. It provides a constantly-tapering charge that eliminates the possibility of overcharging, even with line voltage variations of $\pm 10\%$. Three-phase input chargers have two transformers. The charger is internally protected from overload and short circuits.

When charging lead acid batteries, with the same number of cells and ampere-hour capacity as shown on charger nameplate, the charging time will be approximately 8 hours. Batteries of smaller or larger ampere-hour capacities can also be charged, but will require shorter or longer charging, respectively.

Charge Control

The AC500 Control is provided as the standard charger control. It utilizes either a voltage/time (VT) charge termination or a patented $pT/dV/dT$ charge termination technique which eliminates excessive gassing by returning approximately 107% of the amp-hours removed from the battery.

Features of the AC500 Control include manual equalize, manual stop, back-up timer protection, two charge termination methods, 80% voltage point selection, high and low battery voltage discrimination, and AC power fail recovery.

The AC500 Control is "matched" to the output voltage of the charger by means of a printed circuit board mounted DIP switch. It will operate on 6, 12, 18, 24, 36, and "optional" cell batteries. "Optional" is provided to accommodate batteries between 6 and 36 cells that are not listed above.

The status of a normal charge cycle is indicated by the four LEDs on the front panel. The "80% Charged" LED will light when the battery voltage reaches the 80% charged voltage. This voltage may be 2.37 volts/cell or 2.45 volts/cell nominal, depending on the status of DIP switch S1-7. The "Charge Complete" LED will light only if the battery has completed the charge cycle and is ready for use. The "Abnormal Shutdown" LED will light if the charger terminates a charge prematurely. See the Troubleshooting chapter of this manual to determine the cause of the fault. The "Equalize" LED will light solid when an equalize charge is requested by pressing the EQUALIZE push button. The "Equalize" LED will flash when the charger is equalizing the battery.

WARNING: Do not connect a battery to this charger if any LED is lit. Do not disconnect a battery from this charger while a charge is in progress. Otherwise, arcing and burning of connector parts or a battery explosion may result. Batteries produce explosive gases. Keep sparks, flame, and cigarettes away. Ventilate when charging in an enclosed area. Always shield eyes when working near batteries.

INSTALLATION

Location

For best operating characteristics and longest unit life, take care in selecting an installation site. Avoid locations exposed to high humidity, dust, high ambient temperature, or corrosive fumes. Moisture can condense on electrical components, causing corrosion or shorting of circuits (especially when dirt is also present).

Adequate air circulation is needed at all times in order to assure proper operation. Provide a minimum of 6 inches of free air space at rear and sides of the unit. Make sure that ventilation openings are not obstructed.

Always remove the charger shipping skid from the unit before installation. The charger must be installed over a noncombustible surface such as concrete or metal. Keep the charging area clear of all combustible material such as wood, paper, and cloth.

WARNING: SPARKS OR MOLTEN METAL falling through open bottom can cause fire or explosion.

- Install over noncombustible material such as concrete or metal.
- Keep charging area clear of combustible material.

Grounding

The frame of the power source must be grounded for personnel safety. Where grounding is mandatory under state or local codes, it is the responsibility of the user to comply with all applicable rules and regulations. Where no state or local codes exist, it is recommended that the National Electrical Code be followed.

In addition to the usual function of protecting personnel against the hazard of electrical shock due to fault in the equipment, grounding serves to discharge the static electrical charges which tend to build up on the surfaces of equipment. These static charges can cause painful shock to personnel, and can lead to the erroneous conclusion that an electrical fault exists in the equipment.

If a charger is to be connected to the AC power supply with a flexible jacketed cable, one having a separate grounding conductor should be used. When included in cable assembly, grounding conductor will be green, green with a yellow stripe, or bare. When connecting input power to charger (as instructed in Line

Connection to Battery Charger section of this manual), connect grounding conductor to equipment grounding terminal (stud with a green nut and a cup washer and identified by symbol \equiv), taking care to make a good electrical connection. Connect other end of grounding conductor to the system ground.

If, for any reason, an input cable which does not include a grounding conductor is used, the equipment must be grounded with separate conductor. Minimum size and color coding requirements must be in accordance with any applicable state or local code, or the National Electrical Code.

If metallic armored cable or conduit is used, the metal sheathing or conduit must be effectively grounded as required by state or local code, or the National Electrical Code.

If a system ground is not available, the charger frame must be connected to a driven ground rod (at least 8 ft [2438 mm] long), or to a water pipe that enters the ground not more than 10 ft (3048 mm) from the charger. A grounding conductor must be connected to the rod or pipe in a manner that will assure a permanent and effective ground. The conductor must be sized in accordance with any applicable state or local code, or by the National Electrical Code. If in doubt, use the same size conductor as is used for the conductors supplying power to the charger.

WARNING: ELECTRIC SHOCK HAZARD – Under no circumstance should you use a grounding conductor with a current carrying capacity less than the ampere rating shown in Table 4-1.

Line Voltage Changeover Instructions

1. Determine if the charger is connected for available line voltage. A label located near AC input terminals is marked with the AC voltage for which the charger is factory connected.
2. If charger is not connected correctly, check serial nameplate to determine that charger is equipped to be connected for available line voltage. If charger is suitably equipped, make voltage changeover connections by following instructions on AC INPUT label inside charger.

LINE AMPS	DISCONNECT SWITCH *	BRANCH FUSE SIZE (AMPERES)	COPPER CABLE SIZE AWG **	
			POWER	GROUND
0-2.5	30A	5	No. 14	No. 14
2.6-4.5	30A	7	No. 14	No. 14
4.6-7.5	30A	10	No. 14	No. 14
7.6-12	30A	15	No. 14	No. 14
12.1-16	30A	20	No. 12	No. 12
16.1-18	30A	25	No. 10	No. 10
18.1-22	30A	30	No. 10	No. 10
22.1-24.5	60A	35	No. 8	No. 10
24.6-32.5	60A	40	No. 8	No. 10
32.6-40	60A	50	No. 8	No. 10
40.1-45	60A	60	No. 6	No. 10
45.1-57.5	100A	80	No. 4	No. 8
57.6-78	100A	100	No. 2	No. 8
78.1-102.5	200A	125	No. 2	No. 6
102.6-135	200A	150	No. 1/0	No. 6

Table 4-1 Recommended AC Input and Branch Fusing

The above table (Table 4-1) is based on 75°C (167°F) rated conductors and 40°C (104°F) ambient temperatures. Refer to National Electrical Code (2008) Tables 310-16 corrected to 40°C (104°F).

* For 115, 208, and 230-volt lines, use 250-volt disconnect switch.
 For 440-480, 575-volt lines, use 600-volt disconnect switch.

** Two conductors and ground conductor required for single phase.
 Three conductors and ground conductor required for three phase.

Recommended minimum size of grounding conductors (based on National Electrical Code 2008 – Table 250-95).

3. If charger is reconnected, check input fuse(s) ratings with ratings specified on label and replace if necessary.

CAUTION: INCORRECT CONNECTIONS AND INCORRECT FUSE SIZE can damage this equipment. Follow voltage changeover instructions carefully.

Line Connections to Battery Charger

Follow local code requirements if different than instructions in this manual.

1. Turn charger OFF.
2. Be sure charger is connected correctly for available line voltage as instructed above.

3. On charger nameplate, note the AC input amperes corresponding to the line voltage to which charger is to be connected. Use that ampere value to select the proper disconnect switch, fuse, and power cable sizes from Table 4-1. A “WARNING” label inside charger also lists fuse sizes for each line voltage (circled fuse rating is required for internal line voltage connections made at factory).

4. Route AC power input cable in through knockout provided in side panel of charger cabinet. Securely fasten cable wires to a power input terminal inside charger. Refer to Grounding section of this manual for proper connection of grounding conductor. (Charger cabinet top or side panel, or both, may have to be removed to provide access to terminal block).

5. With disconnect switch (on AC input power line) in “OPEN” or “OFF” position, connect power cable coming from charger, to the switch. Install fuses in switch.

Charging Cable Connectors

If connectors are already attached to charging cables, make sure that they're attached so that positive charger polarity will connect to positive battery terminal.

If connectors must be attached to charging cables, follow instructions supplied with connectors.

CAUTION: Make sure connectors are securely attached to cables (good solder joint or well tightened set screws, whichever is applicable). Be certain that positive charger cable will connect to positive battery terminal. If necessary, trace cables into charger and use supplied connection diagram to determine polarity. The use of a DC voltmeter may show polarity. Improper connections will "blow" output fuse and may cause other damage.

Note: If this charger is equipped with certain optional features, the connector attaching procedure may be modified.

Pre-operation Checks

1. Inspect charger thoroughly for damage; loose screws, nuts, or electrical connections.

WARNING: ELECTRICAL SHOCK HAZARD – Before inspecting or cleaning inside cabinet, turn OFF and remove fuses of disconnect switch (supplying AC power to charger), disconnect battery, and check for voltage on capacitors. Discharge through insulated screwdriver if there is any reading.

2. Remove all special tags that are tied to charger. Keep tags with this manual for future reference. Leave all precautionary and instruction labels in place on charger. Carefully read and follow instructions on all tags and labels. Make sure all labels remain visible to anyone operating charger.
3. Make sure all charger cabinet panels are fastened in place, to assure proper flow of ventilating air through cabinet.

OPERATION

Preliminary

1. Make sure that charger is installed and grounded as instructed in this manual.
2. Make sure the charge control is set to the proper cell size via the charge control DIP switch cell selector.
3. Turn on main fused disconnect switch that supplies AC power to charger.
4. Maintain electrolyte level in batteries to be charged, as instructed by battery manufacturer. The volume of electrolyte will expand during the charge. Therefore, to avoid overfilling, do not add water until the battery has received at least an 80% charge. This will usually be reached at the time gassing starts.

Normal or Daily Charge

WARNING: DO NOT connect a battery to this charger if any LED is lit. Do not disconnect a battery from this charger while a charge is in progress; otherwise, arcing and burning of connector parts or a battery explosion may result. Batteries produce explosive gases. Keep sparks, flame and cigarettes away. Ventilate when charging in an enclosed area. Always shield eyes when working near batteries.

1. Insure that battery size matches the charger. (Number of cells and ampere-hour capacity are within charger nameplate rating.)
2. Securely engage the battery and charger connectors.
3. After a 5 second delay (all LED's will be lit), the charger will turn on. The "Charge in Progress" LED will indicate charging current.
4. The "80% Charged" LED will light when the battery on charge reaches the 80% charged voltage.
5. The charger will automatically turn off and the "Charge Complete" LED will light when the charge has finished. The light will remain on until the battery is disconnected from the charger.

NOTE: To disconnect battery from charger before charge is complete, first press the STOP key, then disconnect the battery from the charger.

Equalize or Weekend Charge

The AC500 features Auto Equalize every fifth charge cycle. Closing S1-9 disables the auto equalize feature; and an equalize charge request can be performed by pressing the "Equalize" pushbutton on the control front panel. When Auto Equalize is enabled (S1-9 is open), then the "Equalize" pushbutton cannot be used to request an equalize charge. The AC500 is shipped with auto equalize enabled. With auto equalize disabled, an equalize charge can be selected or de-selected for any charge cycle using the sequence below.

1. Insure that battery size matches the charger. (Number of cells and ampere-hour capacity are within charger nameplate rating.)
2. Securely engage the battery and charger connectors.
3. After a 5 second delay (all LED's will be lit), the charger will turn on. The "Charge in Progress" LED will indicate charging current.
4. Press the "Equalize" key. The "Equalize" LED will light solid. Press the key again to cancel the equalize charge.

NOTE: The equalize charge cannot be cancelled once the battery reaches the equalize charging period. Press the STOP key to terminate the charge.

5. The "80% Charged" LED will light when the battery on charge reaches the 80% charged voltage.
6. The battery reaches the normal termination point (pT/dV/dT or VT). However, the battery is charged another 3 hours. The "Equalize" LED will flash during this equalize period.
7. The charger will automatically turn off, and the "Charge Complete" and the "Equalize" LED will light when the equalized charge has finished. The LED's will remain on until the battery is disconnected from the charger.

WARNING: DO NOT connect a battery to this charger if any LED is lit. Do not disconnect a battery from this charger while a charge is in progress; otherwise, arcing and burning of connector parts or a battery explosion may result. Batteries produce explosive gases. Keep sparks, flame and cigarettes away. Ventilate when charging in an enclosed area. Always shield eyes when working near batteries.

Manual Stop

1. To turn the charger off during any part of a charge cycle, press the STOP key. All four LEDs will flash.
2. To restart the charger, disconnect and reconnect the battery. A new charge cycle will begin.

Battery Discrimination

The AC500 Control has the ability to reject batteries with cell sizes that do not match the cell size that the control is set up for (via DIP switch S1-1 through S1-6). If the battery connected to the charger has an average terminal voltage of greater than 2.30 volts/cell, the charger will not start and all 4 LEDs will flash, then the "Charge in Progress" LED will flash (high battery fault indication). If the battery voltage eventually falls below 2.30 volts/cell, the control will begin a normal charge sequence.

If the battery connected to the charger has an average terminal voltage of less than 1.75 volts/cell, the charger will not start and all 4 LEDs will flash, then the "80% Charged" LED will flash (low battery fault indication). If the battery voltage eventually rises above 1.75 volts/cell, the control will start a normal charge sequence. If the battery connected to the charger has a terminal voltage of less than 1.75 volts/cell and the operator wishes to start the charge regardless of this low battery voltage, the charge cycle will start if both the EQUALIZE and the STOP keys are held pushed in until all LEDs go out (approximately 5 seconds). Release the key at this time.

Refresh Charge

In order to guarantee that a fully charged battery is always ready for use, a "Refresh" feature has been incorporated into the AC500 Control. If a battery is left connected to the charger for 72 hours after a "Charge Complete" has been reached, the AC500 will start a charge sequence. The running time of this "Refresh" charge will depend on the depth of self-discharge of the battery.

Backup Timer Shutdown

A backup timer will shut down the charger and all 4 LEDs will flash then the "Charge Complete" LED will flash if the battery on charge does not reach the 80% voltage during the first 10 hours of charging.

Likewise, if the AC500 Control is set to terminate via the pT/dV/dT methodology (DIP switch S1-8 off) and the charger does not reach the termination point within 5 hours after reaching the 80% charged voltage, all 4 LEDs will flash then the "Charge Complete" LED will flash.

WARNING: DO NOT connect a battery to this charger if any LED is lit. Do not disconnect a battery from this charger while a charge is in progress. Otherwise, arcing and burning of connector parts or a battery explosion may result. Batteries produce explosive gases. Keep sparks, flame, and cigarettes away. Ventilate when charging in an enclosed area. Always shield eyes when working near batteries.

Battery Disconnect Shutdown

If the battery is disconnected from the charger during a charge cycle, the charger will be shutdown. All LEDs will be off.

Low Current Shutdown

If the charger output current falls below a predetermined level, a low current shutdown will occur. All 4 LEDs will flash, then the "Equalize" LED will flash.

AC Power Fail

During an AC power failure, the AC500 Control stores key information about the charge cycle. The information is retained by powering some of the control's key components with a battery derived power supply. This causes the control to resume the charge where it left off when the AC power is returned, unaffected timers and equalize requests.

MAINTENANCE

WARNING: ELECTRICAL SHOCK HAZARD — Before inspecting or cleaning inside cabinet, turn OFF and remove fuses of disconnect switch (supplying AC power to charger), disconnect battery, and check for voltage on capacitors. Discharge through insulated screwdriver if there is any reading.

Inspection And Cleaning

For uninterrupted, satisfactory service from this charger, it's necessary to keep unit clean, dry, and well ventilated. At least every three months, or more often as necessary, wipe and blow out all dirt from unit's interior components, with clean, dry air of not over 25 psi (172 kPa) pressure. Use a hand bellows if compressed air isn't available.

Check and tighten all electrical connections as necessary to eliminate unnecessary losses and to avoid subsequent trouble from overheating or open circuits. Check for broken wiring or damaged insulation on wiring.

WARNING: ELECTRICAL SHOCK HAZARD — Failure to keep internal parts clean and dry may allow transformer (s) to short out, causing secondary circuits to carry dangerously high voltage.

Be sure to replace all charger cabinet panels after any servicing, to assure proper flow of cooling air through unit and to protect internal components.

WARNING: ELECTRICAL SHOCK HAZARD — All cabinet panels must be replaced to protect personnel from contact with hazardous voltages.

Lubrication

None required.

Charging Rate Adjustment

Although it is normally not required, the charging rate can be adjusted to accommodate unusually high or low AC power line voltages, unusually high or low ambient temperatures, or aged battery.

A rate adjustment is necessary if battery consumes more water than normal or if its specific gravity after a normal (daily) charge is not within 10 points of its gravity after a weekend (equalizing) charge.

CAUTION: Before adjusting charging rate, make sure that bad connections or damage to charger isn't affecting charging process. Also make sure proper charging procedure has been followed (thoroughly read Operation chapter of this manual).

WARNING: ELECTRICAL SHOCK HAZARD — Before adjusting charging rate, turn OFF and remove fuses of disconnect switch (supplying AC power to charger), disconnect battery, and check for voltage on capacitors. Discharge through insulated screwdriver if there is any reading.

	Yellow Jumper	Orange Lead	Charger Output
	8 to 9	to 12	Maximum Output ↑ Higher Output ↓ Lower Output Minimum Output
	8 to 10	to 12	
	8 to 9	to 11	
	8 to 10	to 11	
	8 to 9	to 10	
	8 to 9	to 8	
	8 to 10	to 9	
	8 to 11	to 10	
	8 to 11	to 9	
	8 to 12	to 10	
	8 to 12	to 9	

CONNECTION FOR MINIMUM OUTPUT SHOWN

Table 6-1 Charging Rate Adjustment Table

1. Locate charging rate adjustment label inside charger cabinet (same as Table 6-1). The factory set charging rate is indicated on this label by circles around terminal numbers to which YELLOW jumper and ORANGE lead were connected.
2. Locate YELLOW jumper and ORANGE lead on each transformer terminal block present in your unit (one transformer for single-phase, two for three-phase).
3. Mark present location of YELLOW jumper and ORANGE lead on charger rate adjustment label and on Table 6-1 if different from that marked by factory.
4. Reconnect YELLOW jumper and ORANGE lead to the terminals giving the desired change of charging rate, as shown in Table 6-1.

CAUTION: Do not change connections more than one step before observing effect on charging rate. On fully charged battery (approx. 1.270 to 1.290 specific gravity), rate should not exceed 26% of “MAX AMPS” on charger nameplate. On fully discharged battery (approx. 1.140 specific gravity), rate should not exceed 110% of “MAX AMPS”.

On three-phase chargers, both transformer terminal blocks must be identically connected.

Fuse Replacement

The silicon diodes in this charger are protected by a “fast-clearing” type fuse.

CAUTION: The use of any other type fuse besides the “fast-clearing” type may cause damage to silicon diodes.

Silicon Diode Testing

WARNING: ELECTRICAL SHOCK HAZARD — Before checking electrical components, turn OFF and remove fuses of disconnect switch (supplying AC power to charger), disconnect battery, and check for voltage on capacitors. Discharge through insulated screwdriver if there is any reading.

1. Disconnect one diode lead to isolate diode from electrical circuitry.
2. Use a good quality ohmmeter (preferably one having a mid-scale value of approximately 50 ohms) to measure resistance values.
3. Zero ohmmeter on R x 1 scale.
4. Record indicated resistance while placing either ohmmeter lead on threaded end of diode and other ohmmeter lead on diode lead.

5. Reverse ohmmeter leads on diode and record indicated resistance.
6. Consider diode good if one resistance reading is infinitely (or very) high and the other is extremely low.

NOTE: An acceptable low resistance value or range of values can't be given because of different readings from different ohmmeters, and differences in diodes of the same rating.

Capacitor Testing

1. Heed WARNING in Silicon Diode Testing section.
2. Disconnect capacitor and connect leads of ohmmeter (set to highest scale) to capacitor terminals.

3. If capacitor is good, pointer will deflect, indicating capacitor is being charged, followed by a deflection in the opposite direction indicating partial discharge.

If there is no deflection, capacitor is "open" and must be replaced. Also, if meter needle moves and stops at one value, replace capacitor.

Replacement capacitors must be ordered from factory. When ordering, supply serial number of charger and microfarad (MFD) or (μF) value printed on capacitor.

Troubleshooting

DANGER: ELECTRICAL SHOCK HAZARD — Before checking electrical components, turn OFF and remove fuses of disconnect switch (supplying AC power to charger), disconnect battery, and check for voltage on capacitors. Discharge through insulated screwdriver if there is any reading.

CAUTION: HIGH VOLTAGE FROM TEST EQUIPMENT can damage silicon diodes and other parts. Short silicon diodes with extremely short leads, or disconnect, before applying voltage from a "megger" or other high voltage test equipment.

The following chart contains information which can be used to diagnose and correct unsatisfactory operation or failure of various components of the unit. Each malfunction is followed by a suggested checking or inspection procedure. Refer to Connection/Schematic Diagram in the Diagrams chapter included in this manual.

Troubleshooting Guide

No charging current (Ammeter reads zero)

Check line voltage.

Close fused disconnect switch or repair open circuit.

Check for proper line voltage.

Refer to Line Voltage Changeover instructions in Installation chapter.

Check for blown fuses.

Replace blown fuses. See Table 4-1 for proper fuse sizes.

Check for internal short circuit (diode, winding, wiring).

Repair short circuit, or replace faulty component.

Check for "open" battery circuit.

Clean and tighten connections, especially battery cable connections.

Check Charge Control.

Connect a jumper from the red-white lead of Control Transformer T1 to the red lead of Contactor K1 coil. If charger starts and ammeter shows charging current when a battery is connected, check further for faulty printed circuit card on control and replace as necessary.

Check output circuit fuses. If fuse has blown, check for problem causing fuse to blow.

- a. *Reverse battery connections, if polarity is wrong.*
- b. *Determine whether a diode is shorted. Refer to Silicon Diode Testing.*

Low charging current at beginning of cycle (battery fully discharged)

Check for failed capacitor (s) (one or more).

Replace capacitor if can is ruptured or fails test. Refer to Capacitor Testing.

Check charging rate for "too low" adjustment.

Refer to Charging Rate Adjustment in Maintenance chapter.

Check line voltage for connection to proper input voltage.

Refer to Line Voltage Changeover instructions in Installation chapter.

Check battery for one or more defective cells.

Less than rated output on fully discharged battery (approximately 1/2 rated output)

Check input fuses (one probably blown). Check for either a shorted transformer, or wiring short circuit.

Replace as necessary.

High charging current at beginning of cycle (battery overcharged)

Check charging current for "too high" adjustment.

Refer to Charging Rate Adjustment.

Charger does not shut OFF automatically or start automatically

Check Charge Control.

1. If charger does not start automatically, check for 24 volts AC between the red-white lead and the red-black lead of control transformer T1. If 24V AC is present, connect a jumper from the red-white lead of control transformer T1 to the red lead of contactor K1 coil. If charger starts, check further for faulty printed circuit card on control and replace as necessary.
2. If charger does not stop automatically, check to be sure charging voltage rises above 2.37 volts/cell during the cycle. If not, see low charging current or less than rated output above. If battery on-charge voltage rises above 2.37 volts/cell during the cycle, check for defective control printed circuit card.

	HIGH BATT	LOW BATT	LOW CURR	9 HOUR BACKUP TIMER	5 HOUR BACKUP TIMER	MANUAL STOP
80% LED					solid	
CHARGER COMPLETE LED	flash		solid			
ABNORMAL SHUTDOWN LED	flash	flash	flash	flash	flash	solid
EQUALIZE LED	flash	flash				

Table 7-1 AC500 Control LEDs

Flashing Green “Charge Complete” LED
Flashing Red “Abnormal Shutdown” LED
Flashing Yellow “Equalize” LED

High Battery Voltage Indication

Cause #1: Battery number of cells is greater than rated charger number of cells.

Action: Disconnect the battery from the charger and connect to a charger with the same number of cells as the battery.

Cause #2: Battery was just removed from a charger and has an open circuit terminal voltage greater than the high voltage discrimination setting (2.40 volts/cell).

Action: Confirm that the battery matches the rating of the charger and that none of the battery cells are defective. The charge cycle will begin automatically when the battery voltage falls below 2.40 volts/cell.

Cause #3: DIP switch S1 settings on the AC500 Control are incorrect.

Action: Set the DIP switch S1 according to the Setup chapter in this manual.

Solid Red “Abnormal Shutdown” LED

Manual Stop Shutdown Indication

Cause #1: Charge cycle deliberately terminated by pressing STOP button.

CAUTION: BATTERY IS NOT FULLY RECHARGED.

Action: Disconnect battery from charger. Reconnect battery to charger to begin new charge cycle.

Cause #2: Reason for abnormal shutdown is unknown.

Action: Check specific gravities to determine need for additional charge. Disconnect and reconnect battery to charger to begin new charge cycle.

Solid Yellow “80% Charged” LED
Flashing Red “Abnormal Shutdown” LED

5 Hour Backup Timer Shutdown Indication

Cause: Battery did not reach the dV/dT charge termination within 5 hours after the 80% trip point was reached. Check for one of the following:

1. Abnormally high battery counter EMF
 - a. Sulfation on plates
 - b. Loose/corrected inter-cell connectors
 - c. Battery # of cells not matched to charger
2. Incorrect cell switch setting on the control

Flashing Red “Abnormal Shutdown” LED
Flashing Yellow “Equalize” LED

Low Battery Voltage Indication

Cause #1: Battery number of cells is less than rated charger number of cells.

Action: Disconnect the battery from the charger and connect to a charger with the same number of cells as the battery.

Cause #2: Battery is over-discharged and has an open circuit terminal voltage less than the low voltage discrimination setting (1.85 volts/cell).

Action: Confirm that the battery matches the rating of the charger and that none of the battery cells are defective. If it is desired to start the charge cycle on this low voltage battery, then press both buttons for about 5 seconds. The control will ignore the low battery indication and start the charge cycle.

Cause #3: DIP switch S1 settings on the AC500 Control are incorrect.

Action: Set the DIP switch S1 according to the Setup chapter in this manual.

Solid Green “Charge Complete” LED
Flashing Red “Abnormal Shutdown” LED

Low Current Shutdown Indication

Cause: Low charger output current possibly caused by one of the following:

1. Battery # cells greater than charger cell rating
2. Battery amp-hour rating much less than charger amp-hour rating
3. High resistance in charge circuit
 - a. Cable
 - b. Connector
 - c. Intercell connectors
 - d. Internal cell open
4. Sulfated battery
5. Low acid level
6. Rate incorrectly set
7. Blown input fuses
8. Incorrect line voltage/connections
9. Open rectifier diode
10. Defective power transformer
11. Blown output fuse
12. Wiring between control and the charger

Solid Yellow “80% Charged” LED
Solid Green “Charge Complete” LED
Solid Red “Abnormal Shutdown” LED
Solid Yellow “Equalize” LED

NOTE: All four LEDs will be lit solid for about 5 seconds anytime a battery is connected to the control. However, if the LEDs remain lit (probably dimmer than normal), and the charger does not turn on after the 5 second delay, there is a problem.

Improper AC Voltage Input To Control Indication

Cause #1: AC input to charger is incorrect.

Action: Refer to charger owner's manual.

Cause #2: Connections to and/or from the control transformer are incorrect.

Action: Refer to charger owner's manual.

Flashing Red "Abnormal Shutdown" LED

9 Hour Backup Timer Shutdown Indication

Cause: Battery did not reach the 80% voltage point within 9 hours. Check for one of the following:

1. One or more low voltage cells
2. Low charger output
 - a. Incorrect line voltage/connection
 - b. Blown input fuse
 - c. Charge rate set too low
 - d. Defective power transformer
 - e. Battery has incorrect number of cells for charger/control
 - f. High impedance in cable or connector
 - g. Open rectifier diode

PARTS LIST

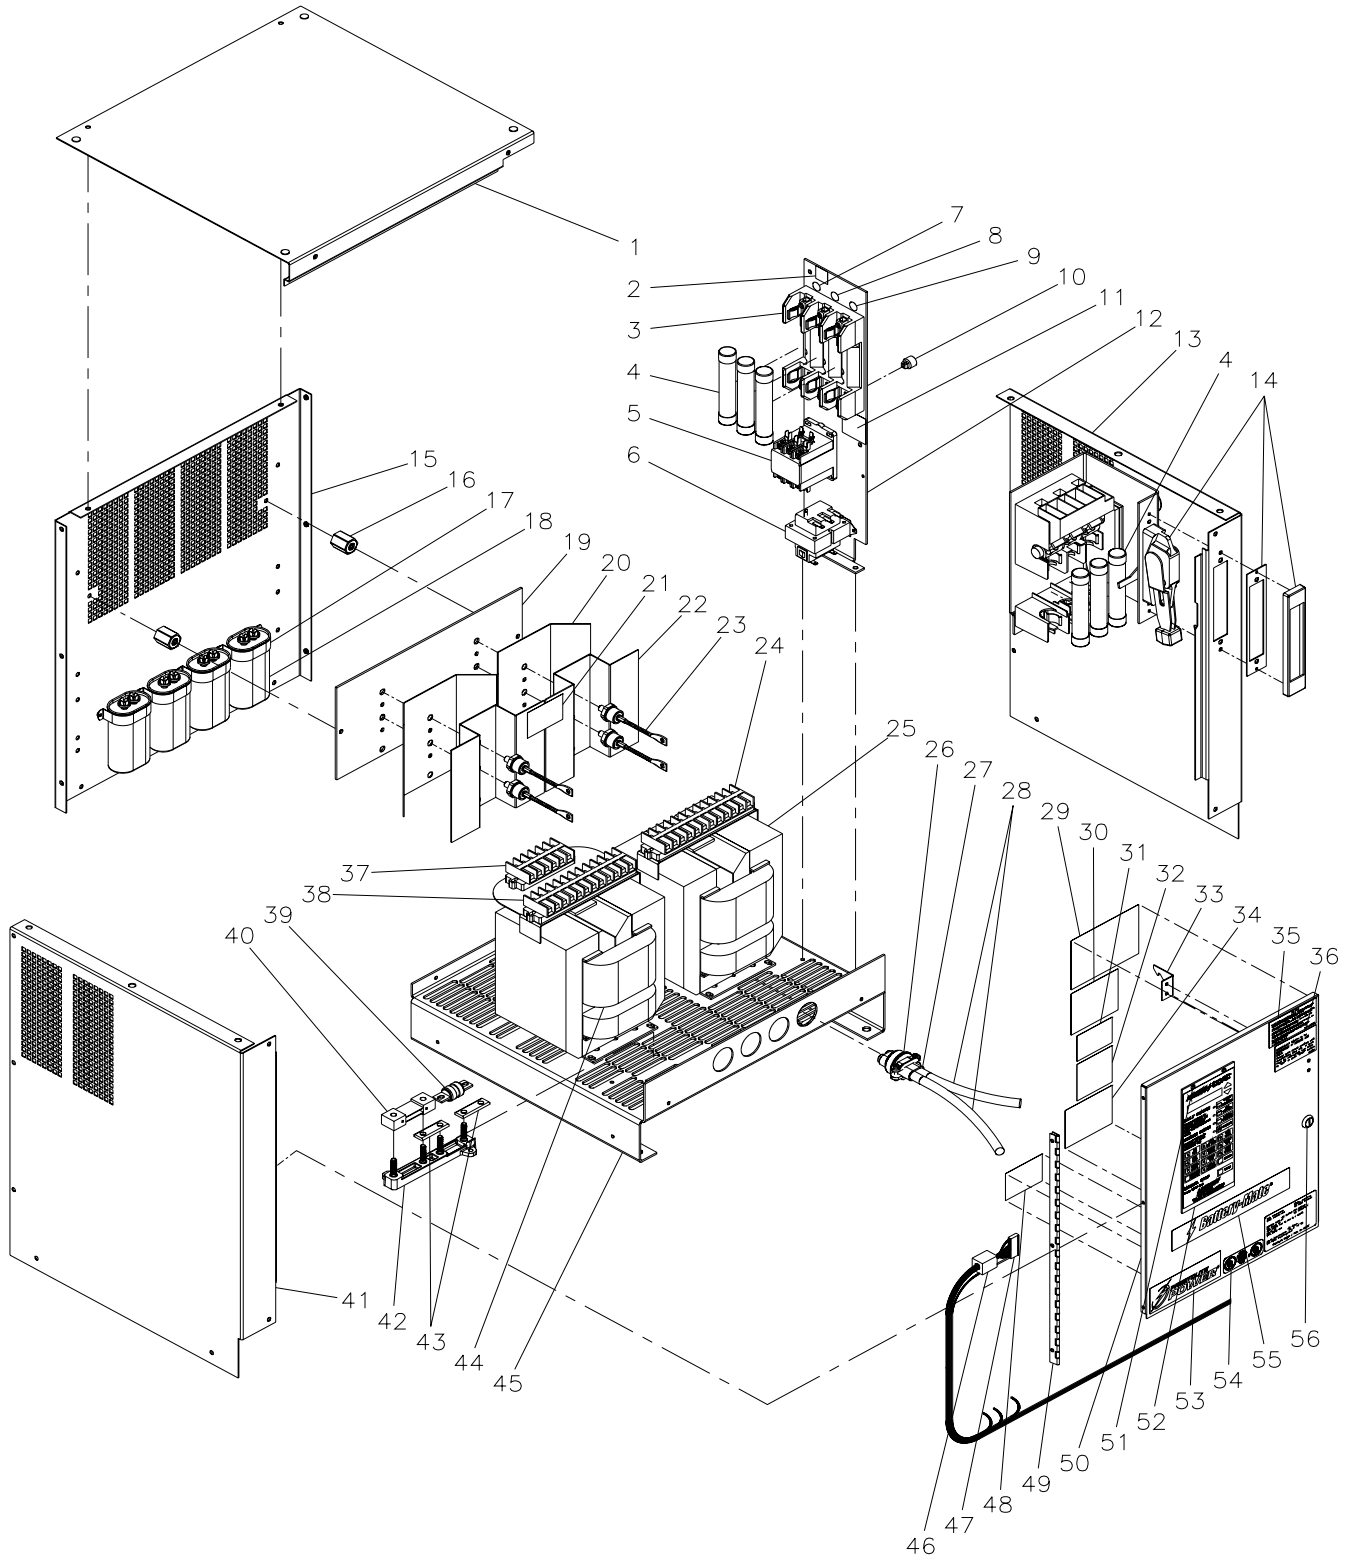


Figure 8-1

ITEM #	PART #	DESCRIPTION
1	194457	Panel, Top
2	405548	Label, Frame Ground
3	See Table	Block, Fuse, Input
4	See Table	Fuse, Input (3 Req'd.)
5	406243-1	Contact, Line
6	See Table	Transformer, Control
7	400092	Label, L1
8	400096	Label, L2
9	400097	Label, L3
10	194827-1	Grommet, Mounting
11	406593	Label, Supply Connections
12	194447	Panel, Interior
13	194565	Panel, Side, Right (w/o Disc. Sw.)
	194456	Panel, Side, Right (w/Disc. Sw.)
14	Call Factory	Switch, Disconnect
15	194454	Panel, Rear
16	404033	Insulator, Heat Sink
17	TRY174-3	Bracket, Mtg., Capacitor
18	See Table	Capacitor, Transformer
19	191191	Heat Sink, Flat
20	191192	Heat Sink, Fin, 45
21	406518	Label, Warning, Heat Sink
22	191193	Heat Sink, Fin, 90
23	See Table	Diode, Silicon (4 Req'd.)
24	Call Factory	Block, Terminal, Transformer, T3
25	See Table	Transformer, T3
26	W10080-5	Connector, Strain Relief
27	378234-13	Cover, Neoprene
28	See Table	Cable, Output Charging
29	See Table	Label, AC Input
30	194335	Label, Danger, Input Volt. & Fuse
31	191892	Label, Warning, Rain Exposure
32	406434	Label, Warning, Sparks
33	194379	Latch, Door, Disconnect (When Used)
34	402717	Label, Charging Rate
35	404099	Label, Danger
36	407250	Label, Disconnect Switch (When Used)
37	191455	Block, Terminal, Transformer, T2
38	191456	Block, Terminal, Transformer, T2
39	See Table	Fuse, Output
40	See Table	Shunt, Current
41	194455	Panel, Side, Left
42	193114	Insulator, Shunt / Fuse
43	392458	Bus Bar (2 Req'd.)
44	See Table	Transformer, T2
45	194453	Base, Charger
46	192266-1	Suppressor, Harness
47	196096	Harness, Interior Panel
48	405026	Label, Fuse, DC Output
49	194377	Hinge, Door
50	194458	Door, Hinged
51	193101-1	Rivet, Snap (2 Req'd.)
52	Call Factory	Control, Charger
53	196036	Label, Prestolite Power
54	404079	Label, UL and CUL
55	196664	Label, Charger, Battery-Mate 80
56	194530	Latch, Door

**3 PHASE
208/240/480 VOLT UNITS**

MODEL NUMBER	SPEC	INPUT FUSE			OUTPUT FUSE	CURRENT SHUNT	INPUT FUSE BLOCK	T2 TRANS	T3 TRANS	DIODE (4 Req'd)	CAPS /TRANS	AC INPUT LABEL	CONTROL TRANS	OUTPUT CABLE
		208	240	480										
600H3-6C	500387C-200	W10386-5	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	193888	193689	193143-1	TRY154-4	406461	406247-2	396143-60
510H3-12C	500170C-200	W10386-5	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	192823	192524	193143-1	TRY154-4	406461	406247-2	396143-60
600H3-12C	500207C-200	W10386-5	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	192856	192857	193143-1	TRY154-4	406461	406247-2	396143-60
750H3-12C	500171C-200	W10386-6	W10386-6	W10386-6	Y1890-4	193125-2	404605-4	192532	192533	193143-1	TRY154-4	406461	406247-2	396143-60
880H3-12C	500175C-200	W10386-6	W10386-6	W10386-6	Y1890-5	193125-2	404605-4	193958	193959	402832-3	TRY154-4	406461	406247-2	396143-61
965H3-12C	500368C-200	W10386-7	W10386-6	W10386-5	Y1890-6	193125-2	404605-4	193783	193784	402832-3	TRY154-1	406461	406247-2	396143-61
1050H3-12C	500172C-200	W10386-7	W10386-6	W10386-5	Y1890-6	193125-3	404605-4	192542	192543	402832-3	TRY154-4	406461	406247-2	396143-61
1260H3-12C	500487C-200	W10386-8	W10386-7	W10386-6	Y1890-7	193125-3	404605-4	194818	194819	402832-3	TRY154-4	406461	406247-2	396143-62
510H3-18C	500178C-200	W10386-6	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	192584	192585	193143-1	TRY154-4	406461	406247-2	396143-60
600H3-18C	500208C-200	W10386-6	W10386-6	W10386-5	Y1890-4	193125-2	404605-4	192927	192928	193143-1	TRY154-4	406461	406247-2	396143-60
750H3-18C	500186C-200	W10386-7	W10386-6	W10386-5	Y1890-4	193125-2	404605-4	192747	192748	193143-1	TRY154-4	406461	406247-2	396143-60
880H3-18C	500187C-200	W10386-8	W10386-7	W10386-5	Y1890-5	193125-2	404605-4	192761	192762	402832-3	TRY154-6	406461	406247-2	396143-61
965H3-18C	500366C-200	W10386-8	W10386-8	W10386-5	Y1890-6	193125-2	404605-4	193695	193696	402832-3	TRY154-6	406461	406247-2	396143-61
1050H3-18C	500188C-200	W10386-9	W10386-8	W10386-5	Y1890-6	193125-3	404605-5	192828	192829	402832-3	TRY154-6	406461	406247-2	396143-61
1260H3-18C	500189C-200	W10386-10	W10386-9	W10386-6	Y1890-7	193125-3	404605-5	192774	192775	402832-3	TRY154-4	406461	406247-2	396143-62
1400H3-18C	500794C-200	W10386-11	W10386-9	W10386-6	Y1890-8	193125-3	404605-5	196925	196926	402832-3	TRY154-4	406461	406247-2	396143-62
380H3-24C	500654C-200	W10386-6	W10386-5	W10386-5	Y1890-3	193125-1	404605-4	196068	196069	193143-1	TRY154-1	406461	406247-2	396143-72
600H3-24C	500370C-200	W10386-7	W10386-7	W10386-5	Y1890-4	193125-2	404605-4	193827	193828	193143-1	TRY154-6	406461	406247-2	396143-60
750H3-24C	500190C-200	W10386-8	W10386-8	W10386-5	Y1890-4	193125-2	404605-4	192788	192789	193143-1	TRY154-6	406461	406247-2	396143-60
880H3-24C	500191C-200	W10386-9	W10386-8	W10386-5	Y1890-5	193125-2	404605-5	192757	192758	402832-3	TRY154-6	406461	406247-2	396143-61
965H3-24C	500369C-200	W10386-10	W10386-9	W10386-6	Y1890-6	193125-2	404605-5	193793	193794	402832-3	TRY154-6	406461	406247-2	396143-61
1050H3-24C	500192C-200	W10386-11	W10386-10	W10386-6	Y1890-6	193125-3	404605-5	192794	192795	402832-3	TRY154-6	406461	406247-2	396143-61
1260H3-24C	500765C-200	W10386-13	W10386-12	W10386-9	Y1890-7	193125-3	404605-5	196892	196893	402832-3	TRY154-6	406461	406247-2	396143-62

3 PHASE
480/575 VOLT UNITS

MODEL NUMBER	SPEC	INPUT FUSE		OUTPUT FUSE	CURRENT SHUNT	INPUT FUSE BLOCK	T2 TRANS	T3 TRANS	DIODE (4 Req'd)	CAPS /TRANS	AC INPUT LABEL	CONTROL TRANS	OUTPUT CABLE
		480	575										
600H3-6C	500367C	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	193741	193742	193143-1	TRY-154-4	406461	406247-2	396143-60
510H3-12C	500170C	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	192527	192528	193143-1	TRY-154-4	406461	406247-2	396143-60
600H3-12C	500207C	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	192962	192964	193143-1	TRY-154-4	406461	406247-2	396143-60
750H3-12C	500171C	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	192536	192537	193143-1	TRY-154-4	406461	406247-2	396143-60
880H3-12C	500175C	W10386-5	W10386-5	Y1890-5	193125-2	404605-4	193960	193961	402832-3	TRY-154-4	406461	406247-2	396143-61
965H3-12C	500368C	W10386-5	W10386-5	Y1890-6	193125-2	404605-4	193840	193841	402832-3	TRY-154-1			
										TRY-154-4	406461	406247-2	396143-61
1050H3-12C	500172C	W10386-5	W10386-5	Y1890-6	193125-3	404605-4	192546	192547	402832-3	TRY-154-4	406461	406247-2	396143-61
										TRY-154-1			
1260H3-12C	500487C	W10386-5	W10386-5	Y1890-7	193125-3	404605-4	194822	194823	402832-3	TRY-154-4	406461	406247-2	396143-62
										TRY-154-1			
510H3-18C	500178C	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	192588	192589	193143-1	TRY-154-4	406461	406247-2	396143-60
600H3-18C	500208C	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	192966	192968	193143-1	TRY-154-4	406461	406247-2	396143-60
										TRY-154-2			
750H3-18C	500186C	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	192752	192753	193143-1	TRY-154-4	406461	406247-2	396143-60
										TRY-154-2			
880H3-18C	500187C	W10386-5	W10386-5	Y1890-5	193125-2	404605-4	192816	192817	402832-3	TRY-154-6	406461	406247-2	396143-61
965H3-18C	500366C	W10386-5	W10386-5	Y1890-6	193125-2	404605-4	193745	193746	402832-3	TRY-154-6	406461	406247-2	396143-61
1050H3-18C	500188C	W10386-5	W10386-5	Y1890-6	193125-3	404605-4	192832	192833	402832-3	TRY-154-6	406461	406247-2	396143-61
										TRY-154-1			
1260H3-18C	500189C	W10386-6	W10386-5	Y1890-7	193125-3	404605-4	192838	192840	402832-3	TRY-154-4	406461	406247-2	396143-62
										TRY-154-3			
380H3-24C	500654C	W10386-5	W10386-5	Y1890-3	193125-1	404605-4	196072	196073	193143-1	TRY-154-2	406461	406247-2	396143-72
										TRY-154-1			
600H3-24C	500370C	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	193860	193861	193143-1	TRY-154-6	406461	406247-2	396143-60
750H3-24C	500190C	W10386-5	W10386-5	Y1890-4	193125-2	404605-4	192842	192844	193143-1	TRY-154-6	406461	406247-2	396143-60
880H3-24C	500191C	W10386-5	W10386-5	Y1890-5	193125-2	404605-4	192846	192848	402832-3	TRY-154-6	406461	406247-2	396143-61
										TRY-154-1			
965H3-24C	500369C	W10386-6	W10386-5	Y1890-6	193125-2	404605-4	193879	193880	402832-3	TRY-154-6	406461	406247-2	396143-61
1050H3-24C	500192C	W10386-6	W10386-6	Y1890-6	193125-3	404605-4	192850	192852	402832-3	TRY-154-6	406461	406247-2	396143-61
										TRY-154-1			

DIAGRAMS

3 PHASE
208/240/480 VOLT UNITS

<u>MODEL NO.</u>	<u>SPEC NO.</u>	<u>DIAGRAM</u>	<u>OUTLINE</u>
600H3-6C	500367C-200	192120	194449
510H3-12C	500170C-200	192120	194449
600H3-12C	500207C-200	192120	194449
750H3-12C	500171C-200	192120	194449
880H3-12C	500175C-200	192120	194449
965H3-12C	500368C-200	192120	194449
1050H3-12C	500172C-200	192120	194449
1260H3-12C	500487C-200	192120	194449
510H3-18C	500178C-200	192120	194449
600H3-18C	500208C-200	192120	194449
750H3-18C	500186C-200	192120	194449
880H3-18C	500187C-200	192120	194449
965H3-18C	500366C-200	192120	194449
1050H3-18C	500188C-200	192120	194449
1260H3-18C	500189C-200	192120	194449
1400H3-18C	500764C-200	192120	194449
380H3-24C	500654C-200	192120	194449
600H3-24C	500370C-200	192120	194449
750H3-24C	500190C-200	192120	194449
880H3-24C	500191C-200	192120	194449
965H3-24C	500369C-200	192120	194449
1050H3-24C	500192C-200	192120	194449
1260H3-24C	500765C-200	192120	194449

3 PHASE

480/575 VOLT UNITS

MODEL NO.	SPEC NO.	DIAGRAM	OUTLINE
600H3-6C	500367C-201	192954	194449
510H3-12C	500170C-201	192954	194449
600H3-12C	500207C-201	192954	194449
750H3-12C	500171C-201	192954	194449
880H3-12C	500175C-201	192954	194449
965H3-12C	500368C-201	192954	194449
1050H3-12C	500172C-201	192954	194449
1260H3-12C	500487C-201	192954	194449
510H3-18C	500178C-201	192954	194449
600H3-18C	500208C-201	192954	194449
750H3-18C	500186C-201	192954	194449
880H3-18C	500187C-201	192954	194449
965H3-18C	500366C-201	192954	194449
1050H3-18C	500188C-201	192954	194449
1260H3-18C	500189C-201	192954	194449
380H3-24C	500654C-201	192954	194449
600H3-24C	500370C-201	192954	194449
750H3-24C	500190C-201	192954	194449
880H3-24C	500191C-201	192954	194449
965H3-24C	500369C-201	192954	194449
1050H3-24C	500192C-201	192954	194449

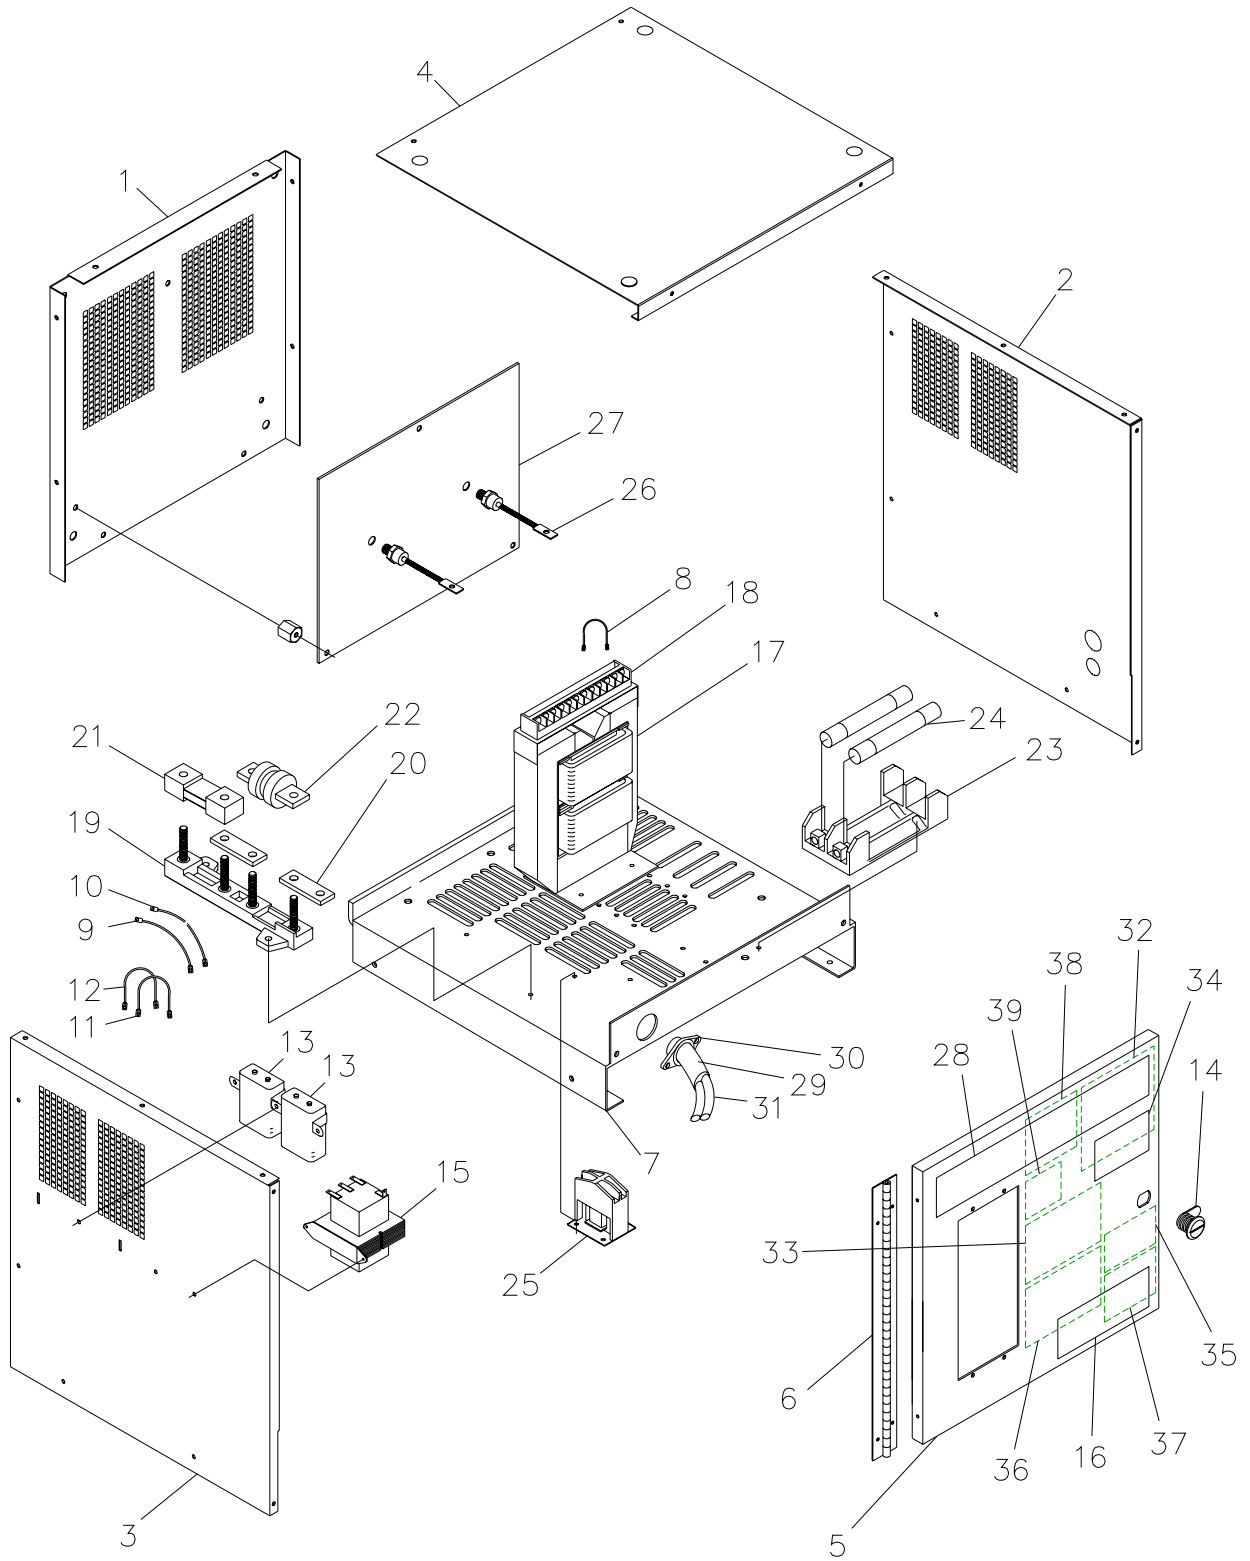


Figure 8-2 1 Phase

<u>ITEM NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	197157	Panel, Rear
2	197159	Panel, Side, Right
3	197158	Panel, Side, Left
4	197163	Top
5	197164	Door
6	197165	Hinge
7	197324	Base
8	357205-357	Lead, Yellow (1 Req'd)
9	357205-127	Lead, Orange (1 Req'd)
10	357205-128	Lead, White (1 Req'd)
11	357205-060	Jumper, Orange (2 Req'd)
12	357205-061	Jumper, White (2 Req'd)
13	See Table	Capacitor, Transformer
14	194530	Latch, Door
15	See Table	Transformer, Control
16	196036	Label, Prestolite
17	See Table	Transformer, Power
18	Contact Factory	Terminal Block
19	193114	Insulator, Fuse & Shunt
20	392458	Bus Bar
21	See Table	Shunt, Meter
22	See Table	Fuse, Output
23	See Table	Block, Input Fuse
24	See Table	Fuse, Input
25	See Table	Contact, AC Input
26	402832-003	Diode, Silicon (2 Req'd)
27	197024	Heat Sink
28	196664	Label, Identification
29	378234-013	Cover, Outer Neoprene
30	W10085-005	Connector, Strain Relief
31	See Table	Cable, DC Output
32	See Table	Label, AC Input
33	194335	Label, Danger, AC Volts & Fuse
34	404099	Label, Danger
35	191892	Label, Rain Exposure
36	402717	Label, Charging Rate
37	406434	Label, Input Warning
38	195531	Label, DC Output Fuse
39	406593	Label, AC Input Fuse
40	197290	Harness, Wire (For Modular Control)

193111-080
PARTS LIST - 1 PHASE

1 PHASE
208/240/480 VOLT UNITS

MODEL NUMBER	SPEC	INPUT FUSE			OUTPUT FUSE	METER SHUNT	INPUT FUSE BLOCK	T2 TRANS	CONTACTOR	CAPS /TRANS	RECTIFIER ASSEMBLY	AC INPUT LABEL	CONTROL TRANS	OUTPUT CABLE
		208	240	480										
380M1-6C	500374C-200	W-10386-5	W-10386-5	W-10386-5	Y-1890-3	193125-1	406207-1	193697	406240-1	TRY-154-4	194701	406461	406247-2	396143-72
450M1-6C	500378C-200	W-10386-5	W-10386-5	W-10386-5	Y-1890-3	193125-1	406207-1	193779	406240-1	TRY-154-4	194702	406461	406247-2	396143-72
510M1-6C	500193C-200	W-10386-5	W-10386-5	W-10386-5	Y-1890-4	193125-2	406207-1	192884	406240-1	TRY-154-4	194702	406461	406247-2	396143-60
600M1-6C	500194C-200	W-10386-5	W-10386-5	W-10386-5	Y-1890-4	193125-2	406207-1	192895	406240-1	TRY-154-4	194707	406461	406247-2	396143-60
250M1-12C	500371C-200	W-10386-5	W-10386-5	W-10386-5	Y-1890-1	193125-1	406207-1	193693	406240-1	TRY-154-4	194700	406461	406247-2	396143-72
380M1-12C	500372C-200	W-10386-5	W-10386-5	W-10386-5	Y-1890-3	193125-1	406207-1	193690	406240-1	TRY-154-4	194701	406461	406247-2	396143-72
450M1-12C	500375C-200	W-10386-5	W-10386-5	W-10386-5	Y-1890-3	193125-1	406207-1	193698	406240-1	TRY-154-4	194702	406461	406247-2	396143-72
510M1-12C	500195C-200	W-10386-5	W-10386-5	W-10386-5	Y-1890-4	193125-2	406207-1	192888	406240-1	TRY-154-6	194702	406461	406247-2	396143-60
600M1-12C	500196C-200	W-10386-7	W-10386-7	W-10386-5	Y-1890-4	193125-2	406207-1	192898	406240-1	TRY-154-6	194707	406461	406247-2	396143-60
750M1-12C	500197C-200	W-10386-9	W-10386-9	W-10386-9	Y-1890-4	193125-2	406207-2	192953	406240-1	TRY-154-6	194703	406461	406247-2	396143-60
880M1-12C	500198C-200	W-10386-10	W-10386-9	W-10386-9	Y-1890-5	193125-2	406207-2	192932	406241-1	TRY-154-6	194704	406461	406247-2	396143-61
965M1-12C	500380C-200	W-10386-10	W-10386-9	W-10386-9	Y-1890-6	193125-2	406207-2	193831	406241-1	TRY-154-6 TRY-154-4	194704	406461	406247-2	396143-61
510M1-18C	500379C-200	W-10386-8	W-10386-7	W-10386-5	Y-1890-4	193125-2	406207-1	193787	406240-1	TRY-154-6	194702	406461	406247-2	396143-60
600M1-18C	500199C-200	W-10386-9	W-10386-9	W-10386-9	Y-1890-4	193125-2	406207-2	192923	406240-1	TRY-154-4 TRY-154-3	194707	406461	406247-2	396143-60
750M1-18C	500200C-200	W-10386-11	W-10386-10	W-10386-9	Y-1890-4	193125-2	406207-2	192950	406241-1	TRY-154-6 TRY-154-1	194703	406461	406247-2	396143-60
450M1-24C	500373C-200	W-10386-9	W-10386-9	W-10386-9	Y-1890-3	193125-1	406207-2	193694	406240-1	TRY-154-6	194702	406461	406247-2	396143-72
510M1-24C	500376C-200	W-10386-10	W-10386-9	W-10386-9	Y-1890-4	193125-2	406207-2	193701	406241-1	TRY-154-6	194702	406461	406247-2	396143-60
600M1-24C	500377C-200	W-10386-11	W-10386-10	W-10386-9	Y-1890-4	193125-2	406207-2	193704	406241-1	TRY-154-6	194707	406461	406247-2	396143-60

1 PHASE
480/575 VOLT UNITS

MODEL NUMBER	SPEC	INPUT FUSE		OUTPUT FUSE	METER SHUNT	INPUT FUSE BLOCK	T2 TRANS	CONTACTOR	CAPS /TRANS	RECTIFIER ASSEMBLY	AC INPUT LABEL	CONTROL TRANS	OUTPUT CABLE
		480	575										
380M1-6C	500374C-201	W-10386-5	W-10386-5	Y-1890-3	193125-1	406207-1	193800	406240-1	TRY-154-4	194701	191655	406247-4	396143-72
450M1-6C	500378C-201	W-10386-5	W-10386-5	Y-1890-3	193125-1	406207-1	193810	406240-1	TRY-154-4	194702	191655	406247-4	396143-72
510M1-6C	500193C-201	W-10386-5	W-10386-5	Y-1890-4	193125-2	406207-1	192910	406240-1	TRY-154-4	194702	191655	406247-4	396143-60
600M1-6C	500194C-201	W-10386-5	W-10386-5	Y-1890-4	193125-2	406207-1	192912	406240-1	TRY-154-4	194707	191655	406247-4	396143-60
250M1-12C	500377C-201	W-10386-5	W-10386-5	Y-1890-1	193125-1	406207-1	193771	406240-1	TRY-154-4	194700	191655	406247-4	396143-72
380M1-12C	500372C-201	W-10386-5	W-10386-5	Y-1890-3	193125-1	406207-1	193806	406240-1	TRY-154-4	194701	191655	406247-4	396143-72
450M1-12C	500375C-201	W-10386-5	W-10386-5	Y-1890-3	193125-1	406207-1	193844	406240-1	TRY-154-4	194702	191655	406247-4	396143-72
510M1-12C	500195C-201	W-10386-5	W-10386-5	Y-1890-4	193125-2	406207-1	192908	406240-1	TRY-154-6	194702	191655	406247-4	396143-60
600M1-12C	500196C-201	W-10386-5	W-10386-5	Y-1890-4	193125-2	406207-1	192914	406240-1	TRY-154-6	194707	191655	406247-4	396143-60
750M1-12C	500197C-201	W-10386-5	W-10386-5	Y-1890-4	193125-2	406207-1	192970	406240-1	TRY-154-6	194703	191655	406247-4	396143-60
880M1-12C	500198C-201	W-10386-6	W-10386-5	Y-1890-5	193125-2	406207-1	192972	406240-1	TRY-154-6	194704	191655	406247-4	396143-61
965M1-12C	500380C-201	W-10386-6	W-10386-5	Y1890-6	193125-2	406207-1	193911	406240-1	TRY-154-6	194704	191655	406247-4	396143-61
510M1-18C	500379C-201	W-10386-5	W-10386-5	Y-1890-4	193125-2	406207-1	193874	406240-1	TRY-154-6	194702	191655	406247-4	396143-60
600M1-18C	500199C-201	W-10386-6	W-10386-5	Y-1890-4	193125-2	406207-1	192960	406240-1	TRY-154-4	194707	191655	406247-4	396143-60
750M1-18C	500200C-201	W-10386-6	W-10386-5	Y-1890-4	193125-2	406207-1	192974	406240-1	TRY-154-3	194703	191655	406247-4	396143-60
450M1-24C	500373C-201	W-10386-5	W-10386-5	Y-1890-3	193125-1	406207-1	193737	406240-1	TRY-154-6	194702	191655	406247-4	396143-72
510M1-24C	500376C-201	W-10386-6	W-10386-5	Y-1890-4	193125-2	406207-1	193822	406240-1	TRY-154-6	194702	191655	406247-4	396143-60
600M1-24C	500377C-201	W-10386-6	W-10386-5	Y-1890-4	193125-2	406207-1	193837	406240-1	TRY-154-6	194707	191655	406247-4	396143-60

1 PHASE
120/208/240 VOLT UNITS

MODEL NUMBER	SPEC	INPUT FUSE			OUTPUT FUSE	METER SHUNT	INPUT FUSE BLOCK	T2 TRANS	CONTACTOR	CAPS /TRANS	RECTIFIER ASSEMBLY	AC INPUT LABEL	CONTROL TRANS	OUTPUT CABLE
		120	208	240										
380M1-6C	500374C-204	W10386-5	W10386-5	W10386-5	Y1890-3	193125-1	405357-1	193804	406240-1	TRY154-4	193853-4	406465	406247-1	396143-72
450M1-6C	500378C-204	W10386-6	W10386-5	W10386-5	Y1890-3	193125-1	405357-1	193812	406240-1	TRY154-4	193853-4	406465	406247-1	396143-72
510M1-6C	500193C-204	W10386-6	W10386-5	W10386-5	Y1890-4	193125-2	405357-1	194495	406240-1	TRY154-4	193853-1	406465	406247-1	396143-60
250M1-12C	500371C-204	W10386-6	W10386-5	W10386-5	Y1890-1	193125-1	405357-1	193802	406240-1	TRY154-4	193853-5	406465	406247-1	396143-72
380M1-12C	500372C-204	W10386-8	W10386-6	W10386-5	Y1890-3	193125-1	405357-1	193808	406240-1	TRY154-4	193853-4	406465	406247-1	396143-72

DIAGRAMS - 1 PHASE

1 PHASE

208/240/480 VOLT UNITS

MODEL NUMBER	SPEC NUMBER	DIAGRAM	OUTLINE
380M1-6C	500374C-200	197325	197203
450M1-6C	500378C-200	197325	197203
510M1-6C	500193C-200	197325	197203
600M1-6C	500194C-200	197325	197203
250M1-12C	500371C-200	197325	197203
380M1-12C	500372C-200	197325	197203
450M1-12C	500375C-200	197325	197203
510M1-12C	500195C-200	197325	197203
600M1-12C	500196C-200	197325	197203
750M1-12C	500197C-200	197325	197203
880M1-12C	500198C-200	197325	197203
965M1-12C	500380C-200	197325	197203
510M1-18C	500379C-200	197325	197203
600M1-18C	500199C-200	197325	197203
750M1-18C	500200C-200	197325	197203
450M1-24C	500373C-200	197325	197203
510M1-24C	500376C-200	197325	197203
600M1-24C	500377C-200	197325	197203


1 PHASE
480/575 VOLT UNITS

MODEL NUMBER	SPEC NUMBER	DIAGRAM	OUTLINE
380M1-6C	500374C-201	197326	197203
450M1-6C	500378C-201	197326	197203
510M1-6C	500193C-201	197326	197203
600M1-6C	500194C-201	197326	197203
250M1-12C	500371C-201	197326	197203
380M1-12C	500372C-201	197326	197203
450M1-12C	500375C-201	197326	197203
510M1-12C	500195C-201	197326	197203
600M1-12C	500196C-201	197326	197203
750M1-12C	500197C-201	197326	197203
880M1-12C	500198C-201	197326	197203
965M1-12C	500380C-201	197326	197203
510M1-18C	500379C-201	197326	197203
600M1-18C	500199C-201	197326	197203
750M1-18C	500200C-201	197326	197203
450M1-24C	500373C-201	197326	197203
510M1-24C	500376C-201	197326	197203
600M1-24C	500377C-201	197326	197203

1 PHASE

120/208/240 VOLT UNIT

MODEL NUMBER	SPEC NUMBER	DIAGRAM	OUTLINE
380M1-6C	500374C-204	197325	197203
450M1-6C	500378C-204	197325	197203
510M1-6C	500193C-204	197325	197203
250M1-12C	500371C-204	197325	197203
380M1-12C	500372C-204	197325	197203

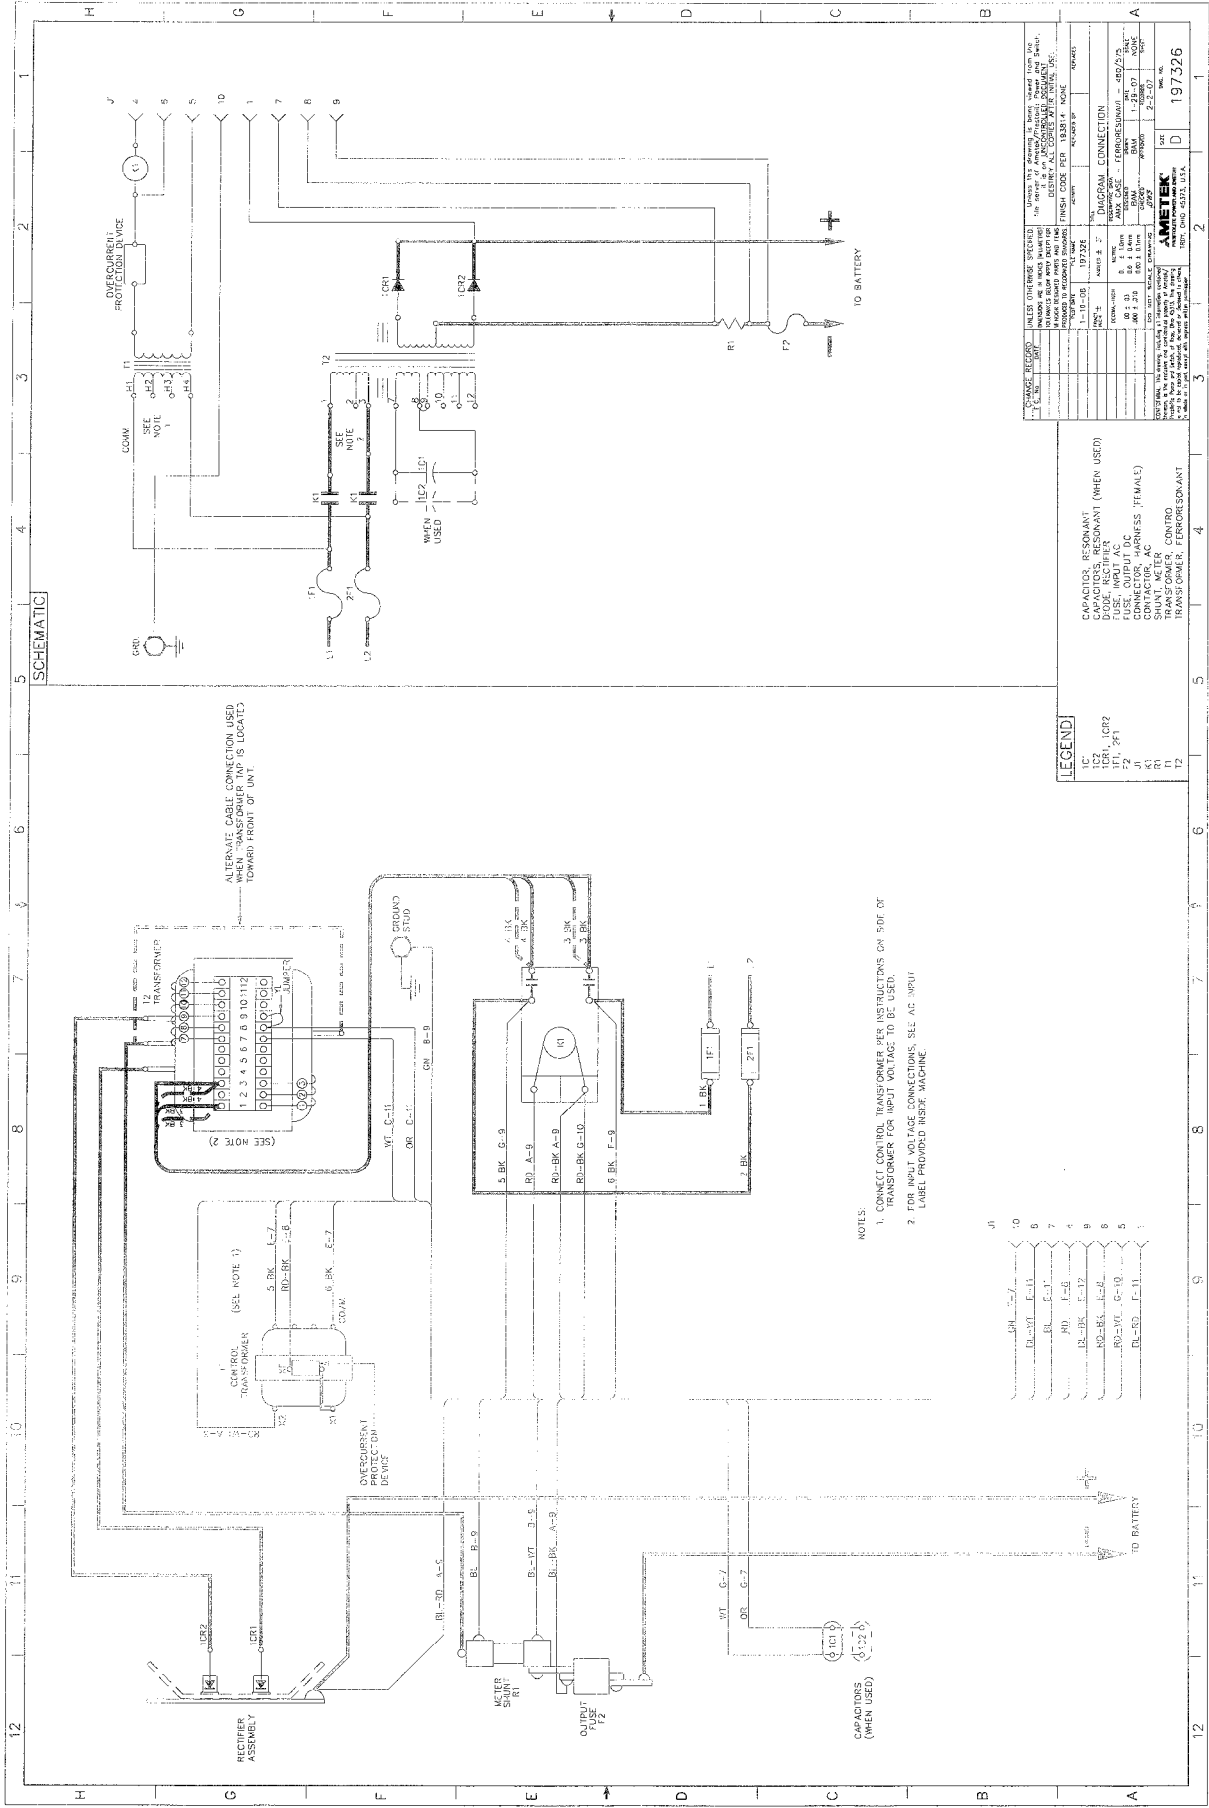

SCHEMATIC

ALTERNATE CABLE CONNECTION USED WHEN "TRANSFORMER TAP IS LOCATED TOWARD FRONT OF UNIT.


- NOTES:**
1. CONNECT CONTROL TRANSFORMER PER INSTRUCTIONS ON 5007 OF TRANSFORMER FOR INPUT VOLTAGE TO BE USED.
 2. FOR INPUT VOLTAGE CONNECTIONS, SEE AC INPUT LABEL PROVIDED INSIDE MACHINE.

LEGEND

1C	CONTROL TRANSFORMER
1CR1, 1CR2	CONTROL TRANSFORMER TAPS
1F1, 1F2	FUSES
1M1, 1M2	METERS
1R1, 1R2	METER SHUNTS
1T1, 1T2	TRANSFORMERS
1U1, 1U2	OVERCURRENT PROTECTIVE DEVICES
1V1, 1V2	VARIABLE RESISTORS
1W1, 1W2	WIRING
1X1, 1X2	CONNECTORS
1Y1, 1Y2	CONTACTORS
1Z1, 1Z2	RELAYS

CAPACITORS (WHEN USED)
 101, 102
 111, 112
 121, 122
 131, 132
 141, 142
 151, 152
 161, 162
 171, 172
 181, 182
 191, 192
 201, 202
 211, 212
 221, 222
 231, 232
 241, 242
 251, 252
 261, 262
 271, 272
 281, 282
 291, 292
 301, 302
 311, 312
 321, 322
 331, 332
 341, 342
 351, 352
 361, 362
 371, 372
 381, 382
 391, 392
 401, 402
 411, 412
 421, 422
 431, 432
 441, 442
 451, 452
 461, 462
 471, 472
 481, 482
 491, 492
 501, 502
 511, 512
 521, 522
 531, 532
 541, 542
 551, 552
 561, 562
 571, 572
 581, 582
 591, 592
 601, 602
 611, 612
 621, 622
 631, 632
 641, 642
 651, 652
 661, 662
 671, 672
 681, 682
 691, 692
 701, 702
 711, 712
 721, 722
 731, 732
 741, 742
 751, 752
 761, 762
 771, 772
 781, 782
 791, 792
 801, 802
 811, 812
 821, 822
 831, 832
 841, 842
 851, 852
 861, 862
 871, 872
 881, 882
 891, 892
 901, 902
 911, 912
 921, 922
 931, 932
 941, 942
 951, 952
 961, 962
 971, 972
 981, 982
 991, 992
 1001, 1002

AMETEK
 197326
 197326

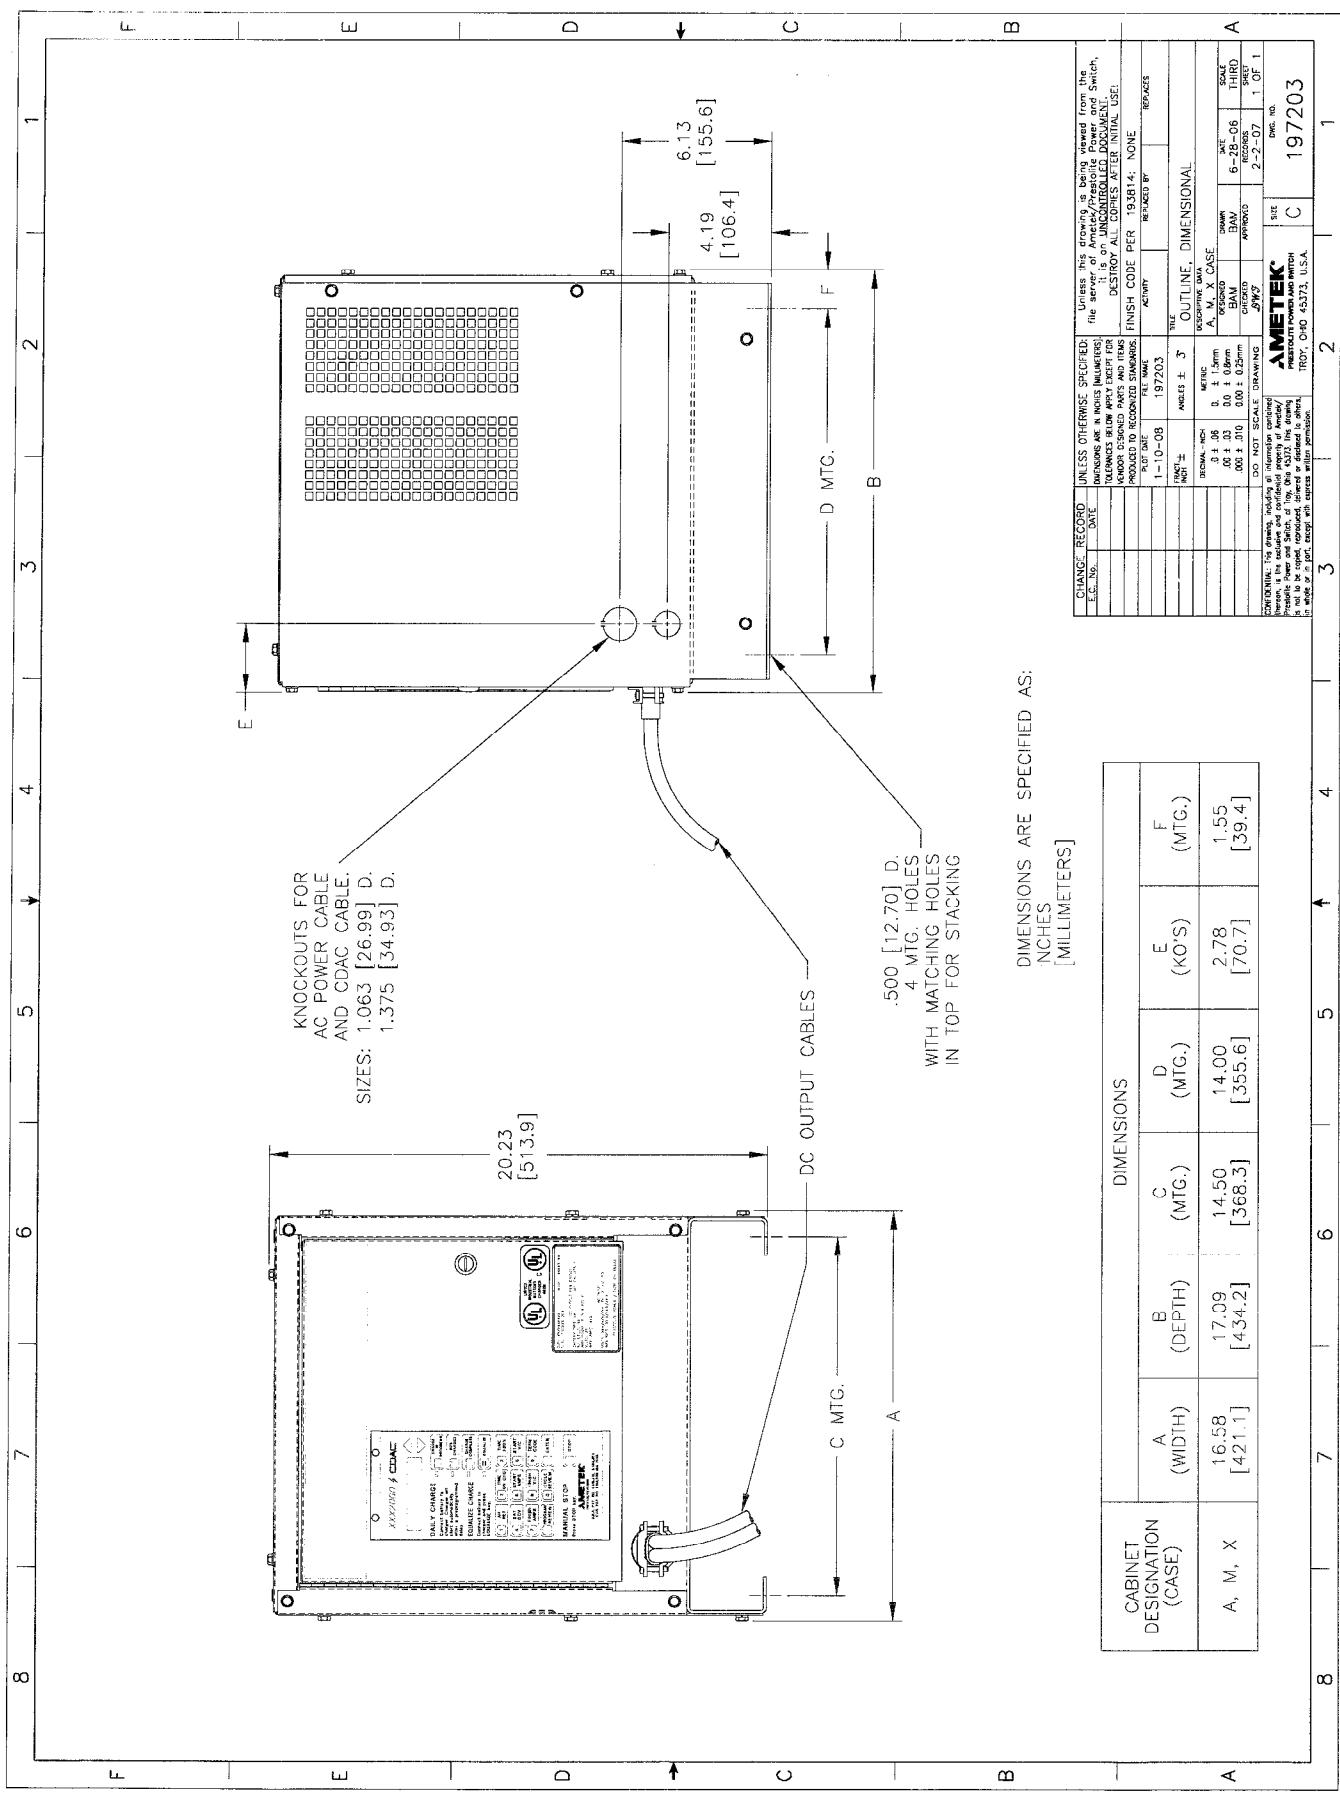

KNOCKOUTS FOR
AC POWER CABLE
AND CDAC CABLE.
SIZES: 1.063 [26.99] D.
1.375 [34.93] D.

DC OUTPUT CABLES
WITH 4 MTG. HOLES
IN TOP FOR STACKING

DIMENSIONS ARE SPECIFIED AS:
INCHES
[MILLIMETERS]

CABINET DESIGNATION (CASE)	DIMENSIONS					
	A (WIDTH)	B (DEPTH)	C (MTG.)	D (MTG.)	E (KO'S)	F (MTG.)
A, M, X	16.58 [421.1]	17.09 [434.2]	14.50 [368.3]	14.00 [355.6]	2.78 [70.7]	1.55 [39.4]

CHANGE RECORD DATE	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES (MILLIMETERS) DIMENSIONS IN PARENT SQUARES ARE IN MILLIMETERS (INCHES) UNLESS OTHERWISE SPECIFIED	FILE NAME	TITLE
		1-10-08	197203
		REVISED BY	REVISED BY
		ACTIVITY	ACTIVITY
		FINISH CODE PER 193B14	NONE
		REPLAZED BY	REPLAZED BY
		SCALE	SCALE
		DRWING	DRWING
		DATE	DATE
		APP'D	APP'D
		THIRD	THIRD
		1 OF 1	1 OF 1
		2-2-07	2-2-07
		197203	197203

AMETEK
TROY, OH 45373, U.S.A.



WARRANTY

AMETEK/PRESTOLITE POWER “FERRORESONANT” INDUSTRIAL BATTERY CHARGERS

Ametek/Prestolite Power (hereinafter called “Prestolite”) warrants that each new and unused Industrial Battery Charger manufactured and supplied by it is of good workmanship and is free from any inherent mechanical defects, provided that (1) the product is installed and operated in accordance with generally accepted industrial standards and in accordance with the printed instructions of Prestolite, (2) the product is used under normal conditions for which designed, (3) the product is not subjected to misuse, negligence or accident, and (4) the product receives proper care, protection and maintenance under supervision of competent personnel. This warranty is subject to the following provisions:

1. **PRODUCT AND PARTS WARRANTED.** Subject to the exceptions listed below each Industrial Battery Charger is warranted for a specific period of time commencing from the date of it’s shipment by Prestolite, provided the charger is used in accordance with Prestolite’s published performance rating for the unit involved. The exceptions to this warranty are as follows:

- a) Terms and conditions for warranty coverage:

<u>FERRORESONANT PRODUCTS</u>	ACCU CHARGER	BATTERY MATE 100	BATTERY MATE 80	BATTERY MATE 60
FULL COVERAGE - LABOR, TRAVEL, MILEAGE & PART REPLACEMENT	10-year "full"	10-year "full"	1-year	1-year
PRINTED CIRCUIT BOARD (REPLACEMENT ONLY)				
TRANSFORMER, INDUCTOR, SCR & DIODE (REPLACEMENT ONLY)			9-years additional	9-years additional
TOTAL WARRANTY TERM (YEARS)	10-years	10-years	10-years	10-years

- b) Warranty Expense Limitation: The maximum warranty expense Prestolite will incur for any Battery Charger will be limited to the original purchase price of the Battery Charger.

- c) Primary switch contacts, fuses, bulbs and filters are not warranted unless found to be defective prior to use.

2. **COMMENCEMENT OF WARRANTY TIME PERIODS.** The warranty periods indicated in the Warranty Schedule shall commence on the date of shipment by Prestolite. The ACCU CHARGER and BATTERY MATE 100, 10-year full warranty only applies to chargers manufactured after the 4th quarter of 2004. Units manufactured previous to the 4th quarter will have 1-year full, plus 9-years parts limited coverage.
3. **PERSONS COVERED BY WARRANTY.** Prestolite extends this warranty only to the purchaser of new equipment from Prestolite or one of its authorized distributors. The products purchased under this agreement shall be used exclusively by the buyer and its employees and by no other persons; and therefore there shall be no third party beneficiary to this warranty.
4. **LIMITATION OF REMEDY.** The existence of claimed defects in any product covered by this warranty is subject to Prestolite’s factory inspection and judgement. Prestolite’s liability is limited to repair of any defects found by Prestolite to exist or, at Prestolite’s option, the replacement of the defective product F.O.B. factory after the defective product has been returned by the purchaser at its expense to Prestolite’s shipping place. Replacement and exchange parts will be warranted for the remainder of the original Industrial Battery Charger Warranty or for a period of ninety (90) days, whichever is greater.
5. **USE OF DEFECTIVE PRODUCT.** Continued use of an Industrial Battery Charger after discovery of a defect VOIDS ALL WARRANTIES.
6. **ALTERED EQUIPMENT.** Except as authorized in writing, the warranty specified does not cover any equipment that has been altered by any party other than Prestolite.

THIS WARRANTY IS GIVEN AND ACCEPTED IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN AS EXPRESSLY SET FORTH HEREIN. IN NO EVENT SHALL PRESTOLITE BE LIABLE FOR ANY ANTICIPATED OR LOST PROFITS, SPECIAL, DIRECT, INDIRECT OR INCIDENTAL DAMAGES, CONSEQUENTIAL DAMAGES, TIME CHARGES OR OTHER COMMERCIAL EXPENSES OR LOSSES, AND BUYER ASSUMES ALL RISK AND LIABILITY RESULTING FROM USE OF THE GOODS. PRESTOLITE DOES NOT AUTHORIZE ANY REPRESENTATIVE OR OTHER PERSON TO ASSUME ON BEHALF OF PRESTOLITE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OR USE OF THE GOODS SOLD, AND THERE ARE NO ORAL AGREEMENTS OR WARRANTIES COLLATERAL TO OR AFFECTING THIS WRITTEN WARRANTY.

WARNING

At all times, safety must be considered an important factor in the installation, servicing and operation of the product and skilled, qualified technical assistance should be utilized.

AMETEK/PRESTOLITE POWER - TROY, OHIO USA

Data Sheet: 1153
 Index: 030105
 Replaces: Original